

Instructions for Use and Care

IFU-2016.03.07



SURGICALINSTRUMENTS.COM

UNMATCHED SERVICE · UNLIMITED INSTRUMENTS

822 Montgomery Ave #205 Narberth, PA 19072 (800) 600-0428

The ALGERBRUSH II burr must be sterilized prior to its initial use and following each use thereafter (for sterilization information, refer to section entitled "Sterilization")

The chuck and burr on the ALGERBRUSH II are held together by friction and may become loose during shipment. Prior to each use of the ALGERBRUSH II, check the following:

- 1) Burr fits snugly within the chuck
- 2) Chuck fits snugly on the motor shaft

*** If either of the above parts is loose, injury to the patient could result if the assembly falls off during use. Please refer to section entitled "Chuck and Burr Maintenance"



OPERATION

To start the ALGERBRUSH II, turn end nut in "ON" direction indicated on ALGERBRUSH II label, i.e., to the right


To stop the ALGERBRUSH II, turn end nut in "OFF" direction indicated on ALGERBRUSH II label, i.e., to the left

*** Note: To ensure ALGERBRUSH II is "OFF", check that the chuck and burr have stopped spinning.

INSTALLATION / CHANGING OF BATTERY

- *** Note: When changing battery, care should be taken not to put pressure on the battery clip as it may break at the point where it attaches to the motor
- Remove chuck and burr assembly (see section entitled "Installation of Chuck and Burr Assembly")
- Remove end nut
- Slide motor and battery assembly out of housing
- Battery must be installed Pole first (closest to motor; see ALGERBRUSH II diagram above) (If battery installed + Pole first, the ALGERBRUSH II will not function properly)
- Place new battery between motor and battery clip (- Pole closest to motor)
- Re-insert motor and battery assembly into housing
- Ensure motor seated properly in housing by checking the following:
 - 1) Motor shaft centered in hole at tip of housing
 - 2) Tip of motor shaft just even with top of housing
- Partially tighten end nut
- Note: if motor starts spinning, see section above entitled "Operation of ALGERBRUSH II" for instructions to stop motor

Warning: If this device is/was used in a patient with or suspected of having Creutzfeldt-Jakob Disease (CJD), the device cannot be reused and must be destroyed due to the inability to reprocess or sterilize to eliminate the risk of cross-contamination!

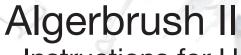

Instructions for Use and Care

IFU-2016.03.07



SURGICALINSTRUMENTS.COM

UNMATCHED SERVICE · UNLIMITED INSTRUMENTS

822 Montgomery Ave #205 Narberth, PA 19072 (800) 600-0428

INSTALLATION OF CHUCK AND BURR ASSEMBLY

- *** Note: Motor must be spinning when installing chuck and burr assembly to ensure motor seated properly
- To install, ensure motor is spinning, i.e., ALGERBRUSH II is "ON"
 - 1) Gently push chuck and burr assembly onto motor shaft
 - 2) Base of chuck should be close to, but not touching, top of housing
 - 3)Turn "OFF" ALGERBRUSH II until ready to use
- To remove,
 - 1) Grasp base of chuck with fingers and pull away from motor shaft or -
 - 2) Gently pry chuck off motor shaft with suitable instrument
 - 3)Turn "OFF" ALGERBRUSH II until ready to use
- To replace burr,
 - 1) Remove chuck and burr assembly from motor shaft (per instructions above)
 - 2) While grasping base of chuck with fingers, grasp shaft of burr with Foley hemostat and pull apart.
 - 3) To insert new (sterilized) burr, use Foley hemostat to grasp burr (grasp in middle of shaft); then, push chuck onto bottom of burr shaft until snug

CHUCK AND BURR MAINTENANCE

- *** Chuck and burr assembly are held together by friction; should they become loose or not fit snugly, use the following procedures to tighten.
- If base of chuck becomes loose on motor shaft, pinch base of chuck gently with small pliers as shown in Figure I below (Note: slit in base of chuck should be facing directly away from you)
- If burr becomes loose in chuck, pinch longer portion of chuck gently with small pliers as shown in Figure II below (Note: slit in longer portion of chuck should be facing directly away from you)

STERILIZATION OF THE ALGERBRUSH II

******** DO NOT AUTOCLAVE THE ENTIRE INSTRUMENT! IT WILL BE RUINED! ********

- Remove chuck and burr assembly from ALGERBRUSH II (per instructions above); Separating burr by itself is fine, but burrs are small and hard to handle; therefore, it is easier to keep chuck and burr assembly together.
- Housing can be cleaned by wiping with alcohol
- Refer to Appendix 1 for validated sterilization and cleaning procedures.

APPENDIX 1: CLEANING AND STERILIZATION INSTRUCTIONS

Scope: The following is applicable before initial use and after each subsequent use. Carbide burrs are provided mechancially clean but are not sterilie (unless labeled as such). Therefore, carbide burrs should be sterilized before first use.

FIG. I



FIG. II





MILLENNIUM
SURGICAL
SURGICALINSTRUMENTS.COM
UNMATCHED SERVICE - UNLIMITED INSTRUMENTS

IFU-2016.03.07

822 Montgomery Ave #205 Narberth, PA 19072 (800) 600-0428

WARNINGS:

- Do not use chemical or dry heat to sterilize carbide burrs, as these processes have not been validated for use.
- Cleaning agents with chlorine or cloride as the active ingredient are corrosive to stainless steel and must not be used. Cleaning agents with neutral pH are recommended.
- Do not use Cold Sterilizing Methods for the sterilization of burrs. These agents often contain strong oxidizing chemicals that may dull or weaken burrs.
- Do not use enzymatic solutions or debriding burrs.

REPROCESSING LIMITATIONS:

• The end of life is determined by wear and damage in use. Carbide burrs should be inspected for defects (i.e. broken tips, broken flute sections, etc.) during the cleaning process.

POINT OF USE:

· Delay in reprocessing must be kept to a minimum to avoid contaminants drying thereby making cleaning more difficult.

CONTAINMENT / TRANSPORTATION:

• Carbide burrs can be transported wet or dry and should be protected from damage. If transported wet there is an increased chacne of staining or corrosion. Prolonged storage in disinfectant solutions may result in degradation of the product and must be avoided.

ULTRASONIC CLEANING PROCEDURE:

- Prepare a fresh pH-neutral cleaning solution; place carbide burr in the dedicated instrument block (if applicable) and then place in a sonication unit. Follow the agent manufacturer's instructions for correct concentration, exposure time, temperature, and water quality. Completely submerge the device in the cleaning solution and sonicate for at least fifteen (15) minutes.
- Perform a final thorough rinse of the device and instrument block (if applicable) under running warm tap water for at least one (1) minute.
- Visually inspect to confirm the removal of debris. Repeat the cycle of needed.
- Dry the device using a non-shedding wipe or clean compressed air.

INSPECTION TESTING

- Carefully inspect each device to ensure that all debris has been removed
- Visually inspect the device for damage / wear that would prevent proper operation:
- Do not use if tip is broken, if there is a broken section of a flute, or if there is evidence of corrosion.

PACKAGING:

- Singly: Pack the carbide burr in pouches validated for sterilization.
- In Sets: Place the carbide burrs in the dedicated instrument block.

Cycle Type	Minimum Sterilization Exposure Time (minutes)	Minimum Sterilization Exposure Temperature	Minimum Dry Time (minutes)
Gravity	10	135°C (275°F)	30
Pre-Vacuum (4 Pulses)	3	134°C (273°F)	30

Do not exceed the sterilizer manufacturer's maximum load.

• Singly: Pack the carbide burr in pouches validated for sterilization.

STORAGE

• The carbide burr should be stored in the sterilization pouch (or instrument block) until required.

ADDITIONAL INFORMATION

• These processes have been validated as being capable of preparing carbide burrs for reuse. Any deviation from these instructions should be properly validated for effectiveness and potential adverse results.